

# ROAD MAP



## ACCESS

- 1 Press and release the **mode** button – the lock icon turns off
- 2 When the lock icon reappears, immediately **press and hold** the **mode** button – the lock icon turns off again
- 3 When the lock icon appears again, **release** the **mode** button . - The ARES II™ is now in **ACCESS** mode to Logbook and Jump Info.

Note: The ARES II™ exits ACCESS and returns to the Main Window if no button has been pressed within 5 seconds. ALL functions (except Power ON) can be performed ONLY when the ARES II™ is in ACCESS mode.

REV. 02, OCTOBER 2022




**WARNING**

This Road Map does not replace the ARES II™ Manual nor releases the user from the obligation to comply with the contents of the ARES II™ Manual.



Visit [lballtimeters.com](http://lballtimeters.com) for manual and support

Instructional videos and YouTube channel

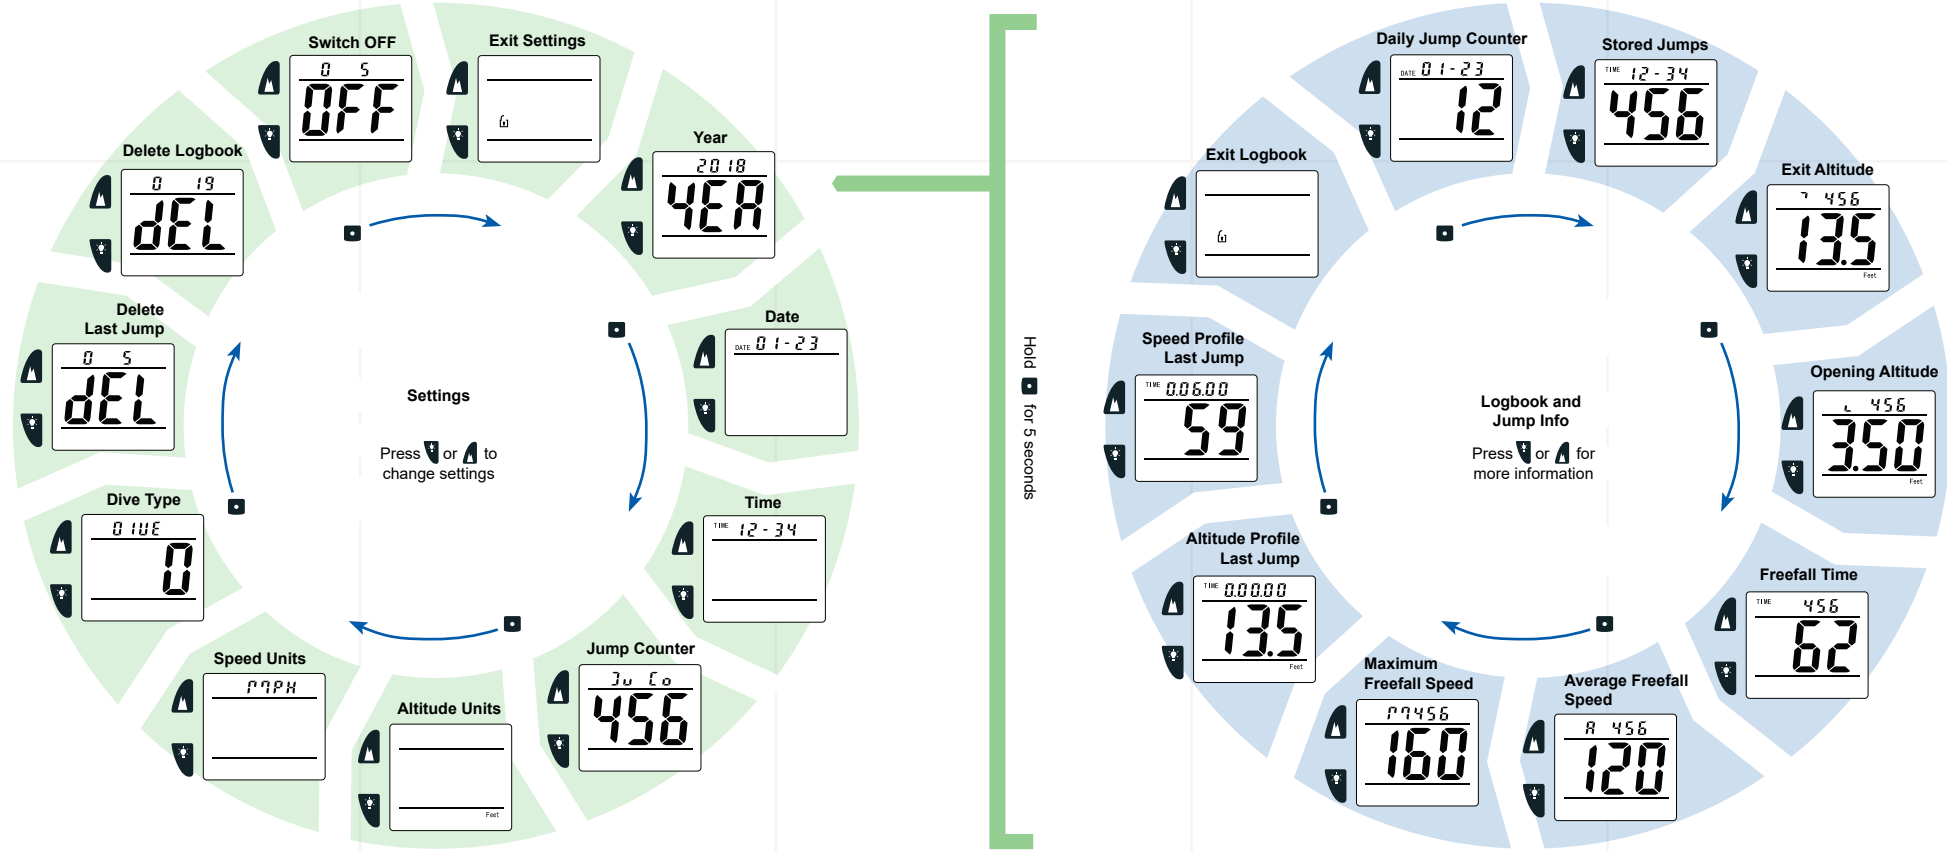

The ARES II™ has been powered OFF prior to shipping from our factory. To turn the **power ON**, press and hold any key for 5 seconds.

To save battery power, the ARES II™ will switch OFF after 14 hours of inactivity. Turn the unit ON before using it for skydiving.

