

ROAD MAP



REV. 02, SEPTEMBER 2022



WARNING

This Road Map does not replace the VISO II+™ Manual nor releases the user from the obligation to comply with the contents of the VISO II+™ Manual.




Visit lballtimeters.com for manual and support

Instructional videos and YouTube channel

ACCESS

- 1 Press and release the **mode** button – the lock icon turns off
- 2 When the lock icon reappears, immediately **press and hold** the **mode** button – the lock icon turns off again
- 3 When the lock icon appears again, **release** the **mode** button .
- The VISO II+™ is now in **ACCESS** mode.


Note: The VISO II+™ exits ACCESS and returns to the Main Window if no button has been pressed within 5 seconds. ALL functions (except Power ON) can be performed ONLY when the VISO II+™ is in ACCESS mode.

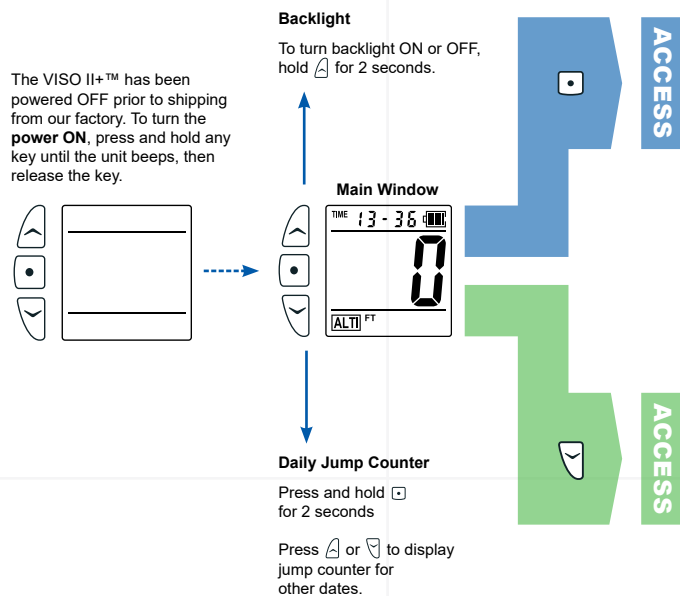

ACCESS

- 1 Press and release the **down** button – the lock icon turns off
- 2 When the lock icon reappears, immediately **press and hold** the **down** button – the lock icon turns off again
- 3 When the lock icon appears again, **release** the **down** button .
- The VISO II+™ is now in **ACCESS** mode.

Note: The VISO II+™ exits ACCESS and returns to the Main Window if no button has been pressed within 5 seconds. ALL functions (except Power ON) can be performed ONLY when the VISO II+™ is in ACCESS mode.

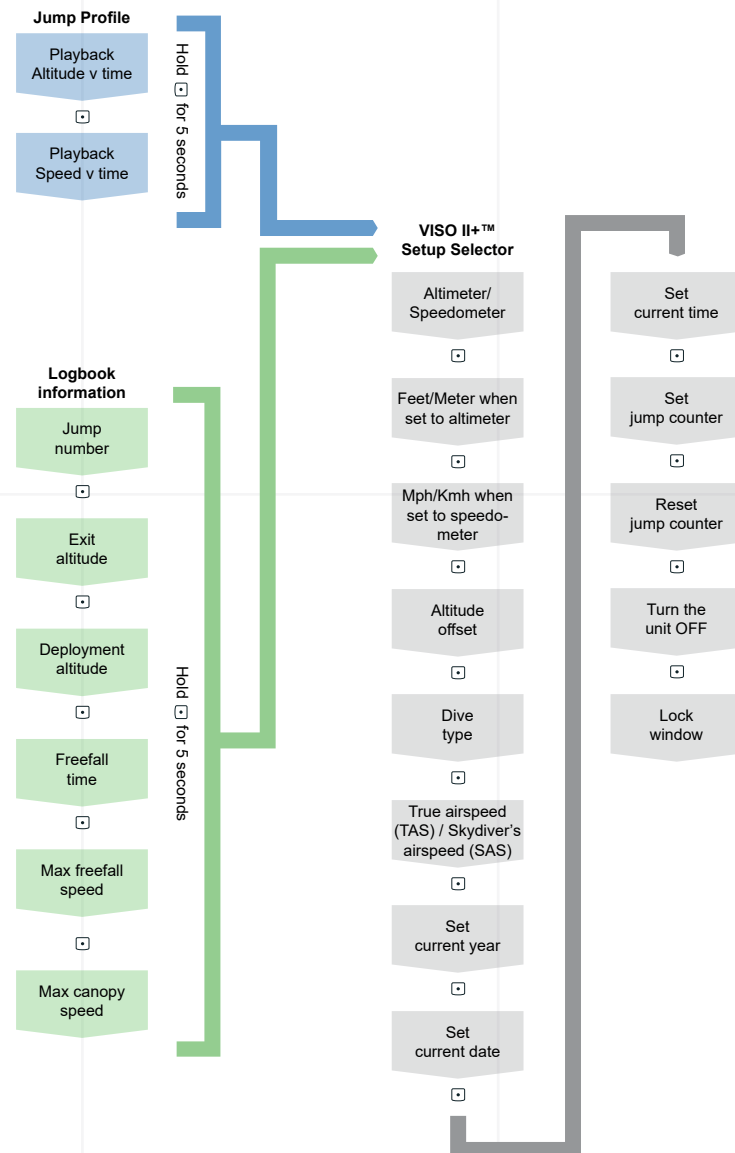

Visit lballtimeters.com for manual and support

Instructional videos and YouTube channel